

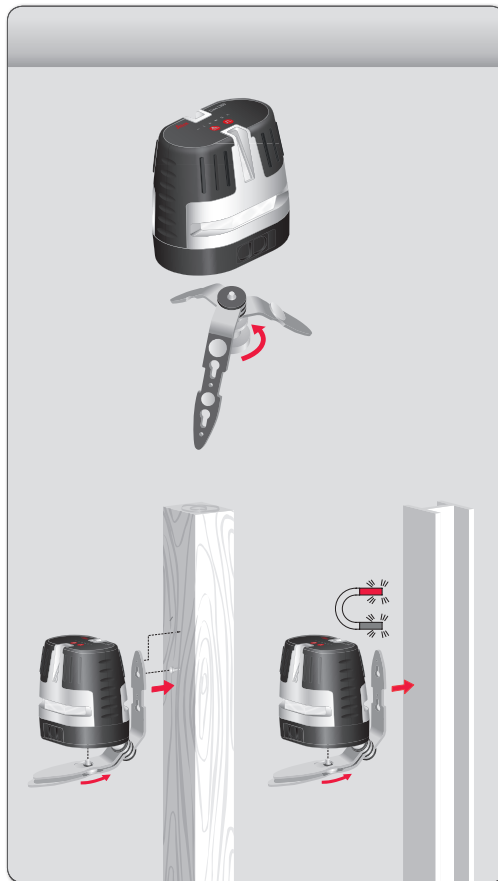


 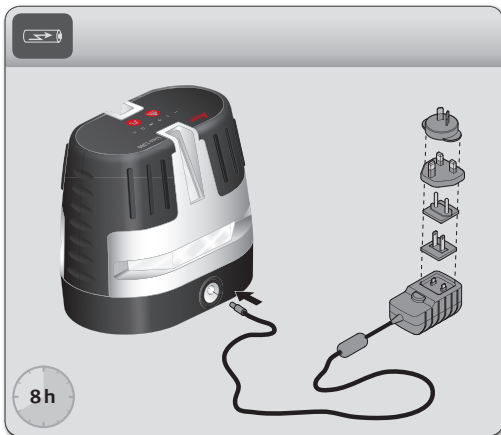


## Quick Start

### Leica Lino L360




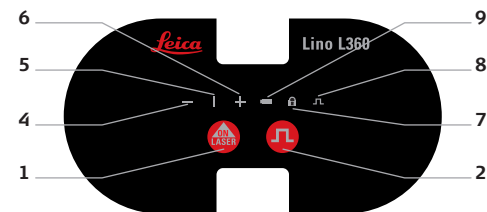


- 1 Laser ON/OFF
- 2 Pulse/Power save mode
- 3 Locked
- 4 Laser line horizontal
- 5 Laser line vertical
- 6 Laser line horizontal and vertical
- 7 Lock switch
- 8 Pulse/Power save mode ON
- 9 Battery voltage too low



- when it has to be **right**

**Leica**  
Geosystems

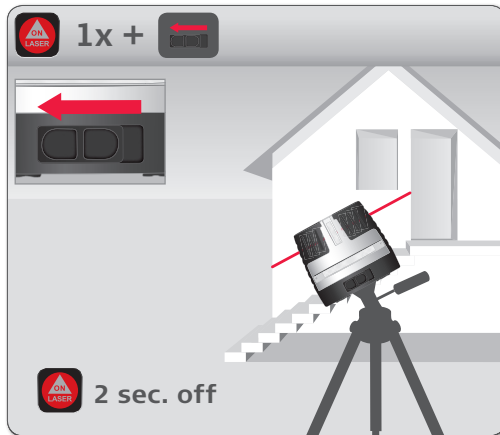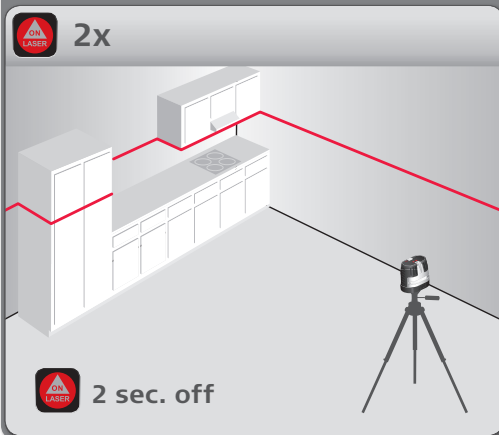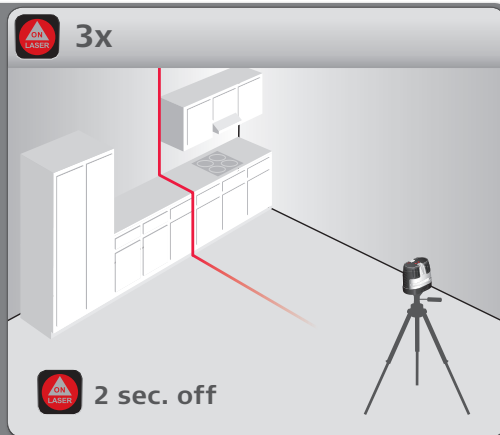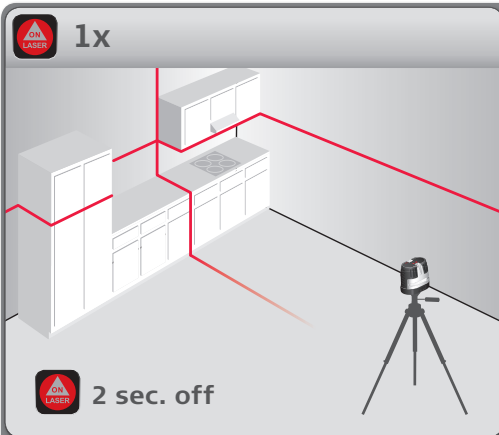

Laser class 2 in acc. to IEC 60825-1

[www.disto.com](http://www.disto.com)

